



Refill Instructions - Canon PG-210 or PG-510

Canon
Pixma: MP240, MP260, MP480,

Items Required
Original Canon PG510 Cartridge,
Drill, Syringe, Filling Tube, Newspaper, sticky tape & Ink

Instructions

1. The filler hole is located under the label on top of the cartridge.
2. Peel label back on top of cartridge, or simply drill through the top at the point shown. (fig.1 & fig.2)
3. Assemble syringe and steel filling tube and fill with appropriate colour ink.
4. Insert the steel filling tube into the appropriate filling holes. (See fig.3 for an exact location).
Push down into centre of the sponge.
IMPORTANT: Cartridge contains a sponge and a slight resistant may be felt.
5. SLOWLY Inject ink. When ink overflows from filling hole or starts to leak from print heads cartridge is full. Stop injecting immediately.
IMPORTANT: Clean syringe with water and dry before refilling next colour.
6. After refilling replace label back over hole and seal with adhesive tape or a plug.
7. Leave the cartridge to stand overnight on non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.
IMPORTANT: DO NOT LEAVE ON TISSUE.
8. Install cartridge and run a priming cycle.

Note: Each time the cartridge is removed from the printer an "empty cartridge" message appears and a blinking amber light will come on, on the printer.

Holding the paper feed button  down for 3-5 sec. will allow you to override the

For more info go to help.jrinkjet.co.uk

