



Refill Instructions - Epson T0711-T0714

Printers

Epson D78, D92, D120, S20
DX4000, DX4050, DX4400, DX4450,
DX5000, DX5050, DX6000, DX6050,
DX7000F, DX7400, DX7450, DX8400,
DX8450, DX9400F, Sx100, Sx200, Sx400

Items Required

Original Epson T0711-T0714 Cartridge, Syringe &
Filling Tube, Insulation tape, Newspaper
Black Cyan Magenta or Yellow Ink 3ml

Instructions

Note : For these cartridges to work when refilled you need to use a chip resetter. The chip resetters has to be specifically designed for the D78 range of printers stated above, and the cartridge has to be at least 30% full for the reset to work.

1. Put down some paper to protect against any spillage during the refilling process.
2. Drill a hole in the top right hand corner of the cartridge. Be careful not to push too hard as there is a plastic membrane at the back of the cartridge that must remain undamaged. (fig.1)
3. Assemble syringe and steel filling tube and fill with appropriate colour ink.
4. Insert the steel filling tube into the filling hole (fig.2).
5. **SLOWLY** inject ink. When ink starts to bleed from the filling hole, cartridge is full. Stop injecting immediately.

IMPORTANT - Clean syringe with water and dry before refilling next colour.

6. Seal the filling hole with a strong adhesive tape (fig.3).
7. Re-attach the casing to the cartridge
8. Reset the chip on the cartridge using your resetter (fig.4).
9. Install cartridge and run a priming cycle.

Important

These cartridges are very difficult to refill so we recommend you refill compatible cartridges instead



fig.2



fig.3



fig.4

